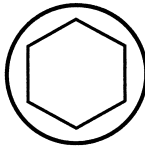
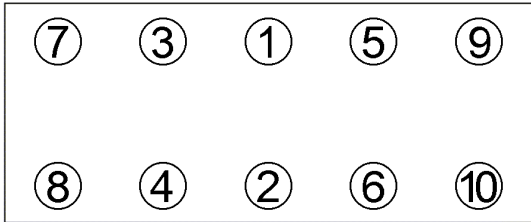


Anziehvorschrift für Zylinderkopf		920.232	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Nissan	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
709.970 M 11 x 157			
Anziehen/ Tightening/ Serrage/ Apriete	* ☐ ➤ ➤	39 Nm 78 Nm 34 - 44 Nm 90° - 100° 90° - 100°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 87 mm			
Mot: SR20De, SR20DE, SR20DI			
2,0 ltr. 85-110 kW (115-150 PS)			
100 NX, Almera, Primera, Sunny III			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*920.232*	