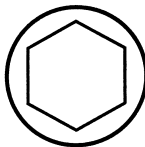
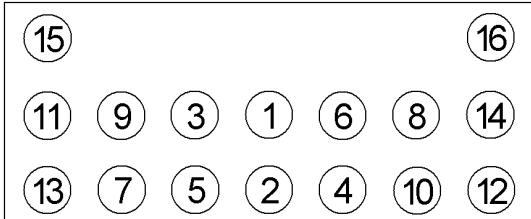


Anziehvorschrift für Zylinderkopf		920.569		 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Nissan		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 710.100				
Anziehen/ Tightening/ Serrage/ Apriete		M 12 29 Nm 113 Nm 29 Nm 100° - 105°		
✱		M 8 16 - 21 Nm		
☐				
➤				
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
÷ 1,58 Ø 85,5 3 Kerben (3 notches)				
Mot. RD 28 T/Ti 2,8 Ltr. 2826 ccm Turbo-Diesel 85/95 kW (115/129 PS) 6 Cyl. Patrol Y 60, Y61, 260				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*920.569*	