

Anziehvorschrift für Zylinderkopf			735.470	passend für / suitable for adaptable à / adaptable a	 Das Original
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
		7 1 4 6 5 3 2 8 5 3 2 8 7 1 4 6			
Anziehen/ * 35 Nm Tightening/ 60 Nm Serrage/ ➤ 90° Apriete ➤ 90°					
Zeichenerklärung / Explanations / Explication / Explicacion					
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø 84 mm ✚ 1,1 mm Cyl. 4-6					
Mot. CAMA, CAMB, CANA, CANB, CANC, CAND, CARA, CASA, CASB, CASC, CASD, CATA, CCLA, CCMA, CCWA, CCWB, CDYA, CDYB, CDYB, CDYC, CEXA, CGKA, CGKB					
A4, A5, A6, A8, Q5, Q7 Phaeton, Touareg					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*735.470*		