



Anziehvorschrift für Zylinderkopf	152.790	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	
	Toyota	

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

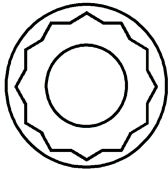

708.240
M 12 x 107/126

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

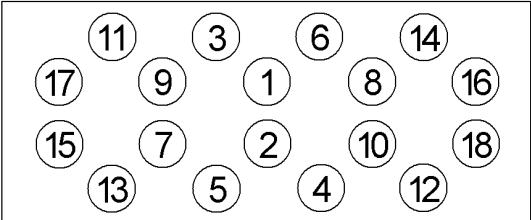

Anziehen/
Tightening/
Serrage/
Apriete

※

➤

➤

38 Nm

78 Nm

90°

90°

Zeichenerklärung / Explanations / Explication / Explicacion

※	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 93,5 mm; ; 1,45 mm Mot: 2L, 2L-T 2,4 ltr Hiace III-IV, Hilux, Land Cruiser Taro (Volkswagen)	
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*152.790*