



Anziehvorschrift für Zylinderkopf	027.072	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

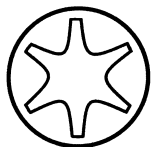

027.850
M12x177+M12x137

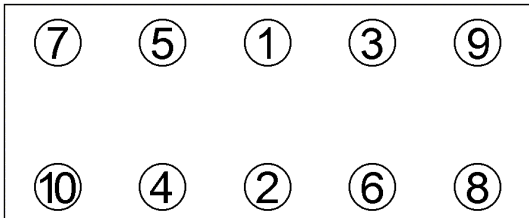

Anziehen/ Tightening/ Serrage/ Apriete	*	M12 x 177: 20 Nm 54 Nm ➤ 90° ➤ 90°	*	M12 x 137: 20 Nm 54 Nm ➤ 90° ➤ 70°
---	---	--	---	--

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83,5mm; $\frac{1}{2}$: 1,32 mm 3 Zähne/Teeth

Mot: BHDA; BHDB; BHPA; C9DA; C9DB; C9DC; F9DA
F9DB; FFDA; HCFA; HCPB; KKDA; RTN; RTP; RTQ

1,8 Ltr. TD 55-85 KW (75-115 PS)

Fiesta; Focus 01/99 →

Transit Connect 05/02 →

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

027.072