
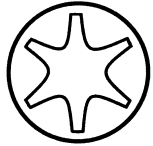
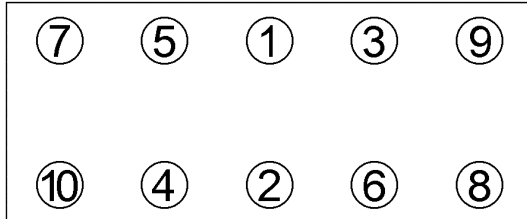


<b>Anziehvorschrift für Zylinderkopf</b>	<b>027.092</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>Ford</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



027.850  
M12x177+M12x137



Anziehen/ Tightening/ Serrage/ Apriete	*	M12 x 177:	*	M12 x 137:
		20 Nm		20 Nm
		54 Nm		54 Nm
	➤	90°	➤	90°
	➤	90°	➤	70°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 83,5mm;  $\frac{1}{2}$ : 1,42 mm    5 Zähne/Teeth

Mot:    BHDA; BHDB; BHPA; C9DA; C9DB; C9DC; F9DA  
F9DB; FFDA; HCPA; HCPB; KKDA; RTN; RTP; RTQ

1,8 Ltr. TD 55-85 KW (75-115 PS)

Fiesta; Focus    01/99 →  
Transit Connect    05/02 →

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*027.092\***