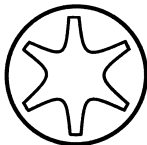
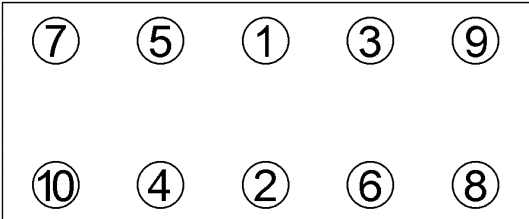


Anziehvorschrift für Zylinderkopf		027.112			
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a Ford Das Original			
 027.850 M12x177+M12x137		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 			
Anziehen/ Tightening/ Serrage/ Apriete		*	M12x177: 20 Nm 54 Nm ➤ 90° ➤ 90°	*	M12x137 20 Nm 54 Nm ➤ 90° ➤ 70°
Zeichenerklärung / Explanations / Explication / Explicacion					
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 83,5mm; ½: 1,52 mm 7 Zähne/Teeth Mot: BHDA; BHDB; BHPA; C9DA; C9DB; C9DC; F9DA F9DB; FFDA; HCPA; HCPB; KKDA; RTN; RTP; RTQ 1,8 Ltr. TD 55-85 KW (75-115 PS) Fiesta; Focus 01/99 ➔ Transit Connect 05/02 ➔					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*027.112*		