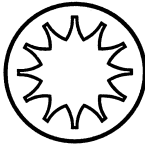
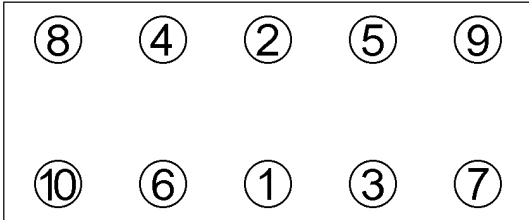


Anziehvorschrift für Zylinderkopf		473.480		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
022.670 M 9 x 1,25 x 84				
Anziehen/ Tightening/ Serrage/ Apriete	* 17 Nm 34 Nm ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 0,30 mm Ø 73 mm				
Mot. 2SZ-FE 1,3 16V Yaris (_CP10) 2002 ➔				
Mot. K3-VE 1,3 16V 2000 ➔				
Daihatsu Extol, Sirion (M1), Terios (J1), YRV (M2)				
1 Stück/piece/pièce/pieza				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*473.480*	