

# Cylinder Head Gasket Retightening Procedure

	Phase 1	Phase 2	Phase 3	Phase 4	Phase 5	Phase 6	Phase 7	Phase 8	Retightening
A	2.5 Kpm	5 Kpm	10 Kpm	-180°	4 Kpm	90°	90°		NO
B									
C									
D									

Pounds

	Phase 1	Phase 2	Phase 3	Phase 4	Phase 5	Phase 6	Phase 7	Phase 8	Retightening
A	18 lbft	36 lbft	72 lbft	-180°	29 lbft	90°	90°		NO
B									
C									
D									


Note A

Note B

Note C

Note D

	1	2	3	4	5	6
Reference	10150300	10150310				
Piston	<0.078	>0.078				

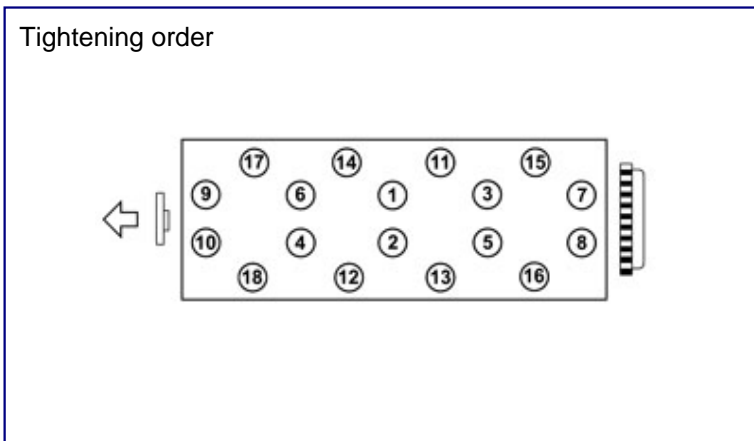

Symbol	Explanation
- 90° +	LOOSEN 90° AND TIGHTEN THE CYL. HEAD BOLTS ONE BY ONE FOLLOWING THE SPECIFIED TIGHTENING AND ORDER.
<>	TURN THE ENGINE UNTIL THERMOSTAT IS COMPLETELY OPEN.  LET ENGINE COOL DOWN FOR 4 HOURS (WITH OPEN BONNET).  OPEN THE FILLER CUP OF THE COOLING WATER CIRCUIT EXPANSION VASE.
Retightening	IF A RETIGHTENING IS NECESSARY: LOOSEN 90° AND TIGHT AGAIN THE CYL. HEAD BOLTS ONE BY ONE FOLLOWING THE ORDER  AND LAST TIGHTENING SPECIFIED. THIS OPERATION SHOULD BE CARRIED OUT BETWEEN 1000 AND 1500 KM.