

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

920.178


passend für / suitable for
adaptable à / adaptable a

Nissan




Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

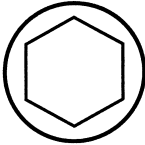

709.940
M 10 x 96

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

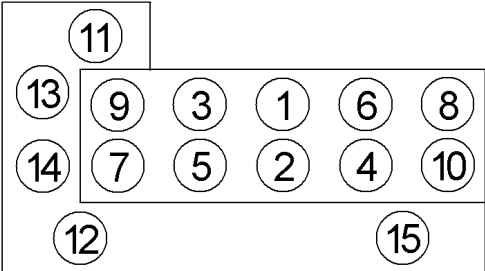

Anziehen/
Tightening/
Serrage/
Apriete

*

☐
➤

POS. 1-10
29 Nm
59 Nm
29 Nm
50° - 55°

POS. 11-15
* 6,8 - 8 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
-----------------------	--	---	---	---

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 77,5 mm

Mot: GA16DS, GA16DE
1,6 ltr.

Sunny III, Serena, 100 NX, Almera I-II, Vanette,
AD Wagon, Primera

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

920.178