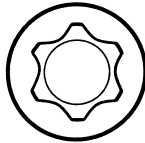
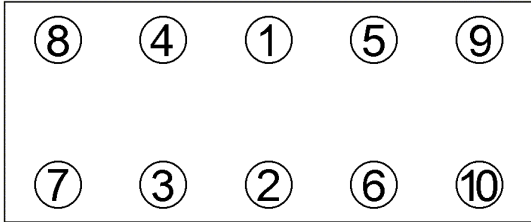


Anziehvorschrift für Zylinderkopf		075.850	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		PSA		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 267.550 M12x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 60 Nm ➤ 220°			
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 86 mm, ✱: 1,45 mm, 4 Kerben/notches				
Mot: DW10 TD/UTD/ATED/BTED, RHS, RHV, RHX, RHZ 2,0 Ltr. HDi Diesel				
Berlingo, C5, Evasion, Jumper, Jumpy, Xantia, Xsara Ducato, Scudo, Ulysse, Zeta, 206, 306, 307, 406, 407, 607, 806, Boxer, Expert, Partner, Grand Vitara				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*075.850*	