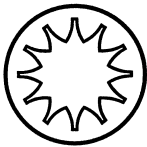
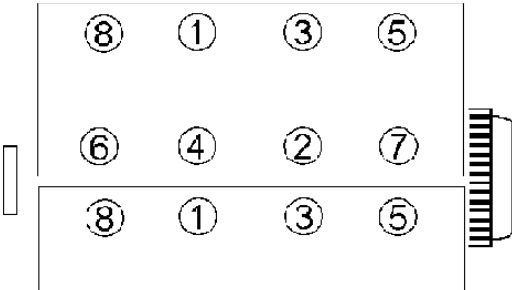


Anziehvorschrift für Zylinderkopf		434.800	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Toyota / Lexus	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	36 Nm 90° 90° M14 Except bolt = 30 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro			
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 96 mm; ½: 0,5 mm mounting position: right			
Mot: 2GR-FE / 2GR-FSE / 2GR-FXE 3,5 ltr. V6 Avalon, Camry, Previa, Tarago, RAV 4, Highlander Sienna, IS 350, RX 350, GS			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*434.800*	