


Anziehvorschrift für Zylinderkopf	397.690	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete



057.450
M 10x132x1,5

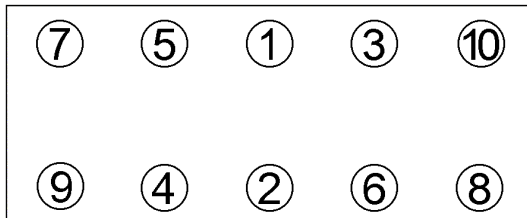

● =M6

Anziehen/ *
Tightening/
Serrage/ 52 Nm
Apriete ➤ 82 Nm
360° (lösen / loosen)
52 Nm
103 Nm
M6: 11 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

1,8 L / 2,0 L
Ø: 85 mm; $\frac{1}{8}$: 0,7 mm

Mot.: J18A / J20 A
89-107 kW (121-146 PS)

Baleno, Grand Vitara, Vitara

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

397.690